


## TILT LEVER KNOB RELEASE

### REMOVAL

1. Remove the screw (1) securing the tilt lever knob (2).

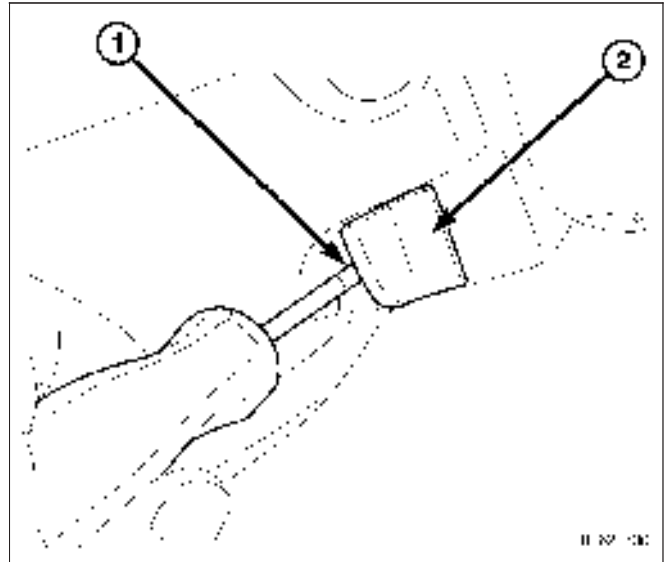

2. Remove the steering column opening cover (Refer to 23 - BODY/INSTRUMENT PANEL/STEERING COLUMN OPENING COVER - REMOVAL).
3. Remove the lower shroud.

**NOTE:** Use special care not to pry on the clockspring electrical connector when removing or installing the mounting screw located next to the clockspring.

4. Remove the two mounting screws (1) from the tilt lever knob release bracket (3).

