

POWER LOCK SWITCH - REMOVAL

REMOVAL

1. Disconnect and isolate the battery negative cable.
2. Using a trim stick, gently pry the switch from the door trim panel.
3. Disconnect electrical connectors.
4. Remove switch from trim panel.



