

P0336



DTC
P0336



Symptom Descriptor
Crankshaft Position (Ckp) Sensor Signal
Crankshaft Position Sensor Performance



Probable Causes
(K824) 5-Volt Supply Circuit Open
(K824) 5-Volt Supply Circuit Shorted to (K925) Return Circuit
(K853) 5-Volt Supply Circuit Open
(K853) 5-Volt Supply Circuit Shorted to Battery Negative
(K853) 5-Volt Supply Circuit Shorted to Return Circuit
(K925) Return Circuit Open
Crankshaft Position (CKP) Sensor
Crankshaft Position (CKP) Signal Circuit Open
Crankshaft Position (CKP) Signal Circuit Shorted to (K824) 5-Volt Supply Circuit
Crankshaft Position (CKP) Signal Circuit Shorted to (K853) 5-Volt Supply Circuit
Crankshaft Position (CKP) Signal Circuit Shorted to (K925) Return Circuit
Crankshaft Position (CKP) Signal Circuit Shorted to Ground
Crankshaft Position (CKP) Signal Circuit Shorted to Return Circuit
Engine Control Module (ECM)
Return Circuit Open

We need your feedback to help us improve this new feature!