


2008 Dodge or Ram Truck RAM 2500 Truck 4WD L6-6.7L DSL Turbo

Vehicle > Engine, Cooling and Exhaust > Engine > Drive Belts, Mounts, Brackets and Accessories > Engine Mount > Service and Repair > Removal and Replacement > Engine Mount - Removal


FRONT ENGINE MOUNT

REMOVAL

CAUTION: If replacing a engine mount / bracket, be certain to inspect all other engine mounts / brackets in the system. Failure to follow this caution may result in damage to the vehicle.

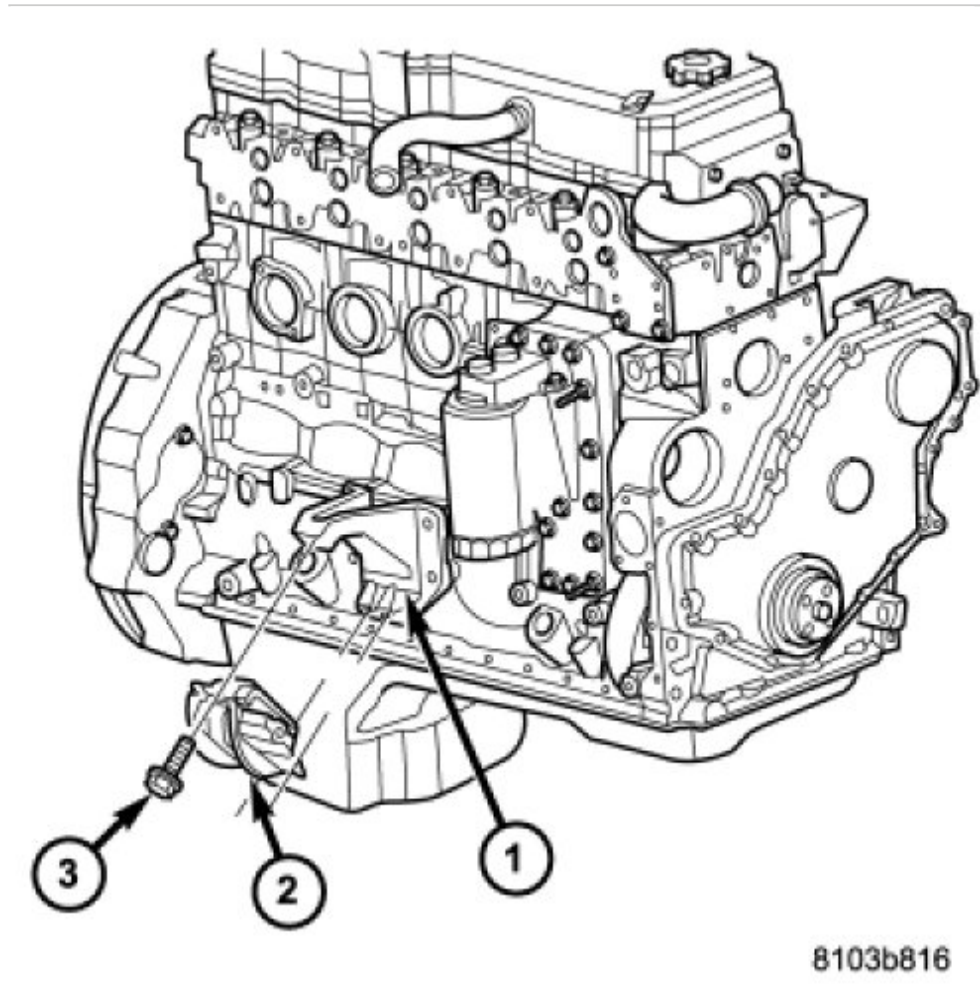

1. Disconnect the battery negative cables.
2. Remove the viscous fan/drive assembly See: Radiator Cooling Fan > Removal and Replacement > Radiator Fan - Removal .
3. Raise vehicle on hoist.
4. Install engine support fixture tool# 8534 and steel bracket tool # 8534A
5. Loosen the thru-bolt and nut.
6. Lift the engine SLIGHTLY and remove the insulator to block bolts.
7. Remove the RH mount (2) from the engine.

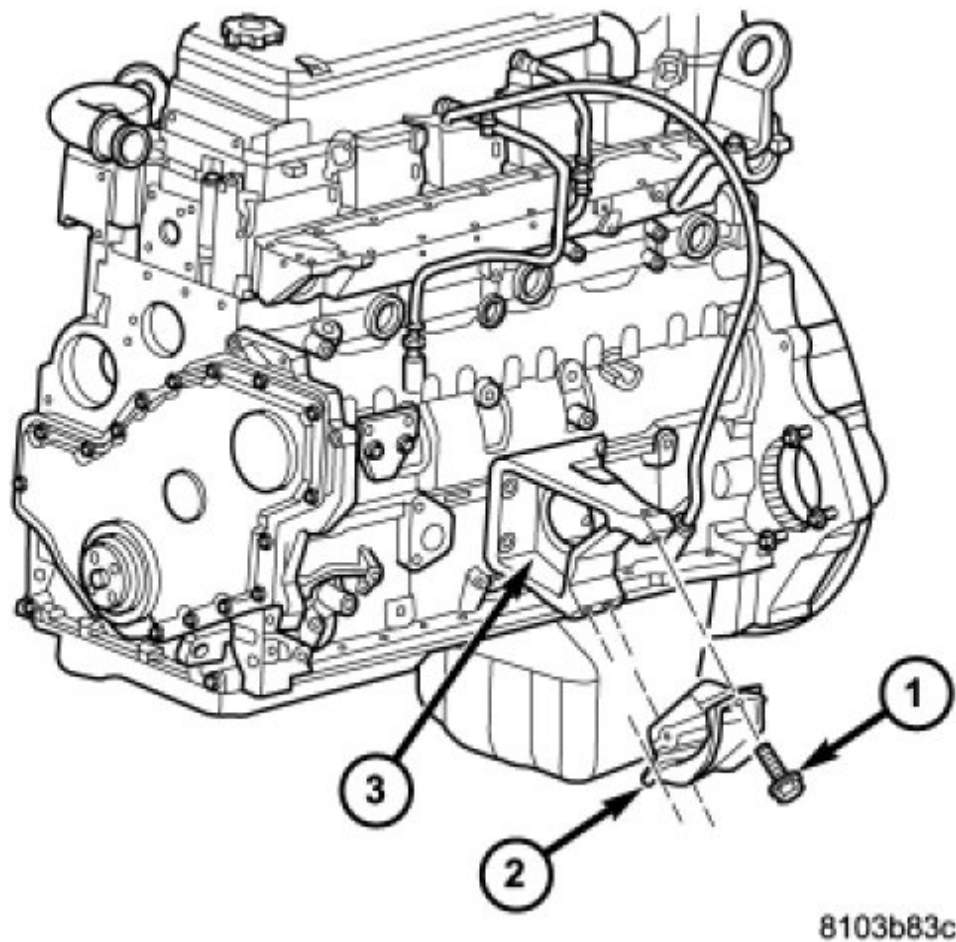

8. Remove the LH insulator (2) from the vehicle.