


HEADLAMP UNIT


REMOVAL AND INSTALLATION

REMOVAL


1. Disconnect and isolate the negative battery cable(s) (Refer to 08 - Electrical/Battery System/Standard Procedure) .
2. Remove the grille, (Refer to 23 - Body/Exterior/GRILLE/Removal and Installation) .
3. Remove the fasteners (1,2).

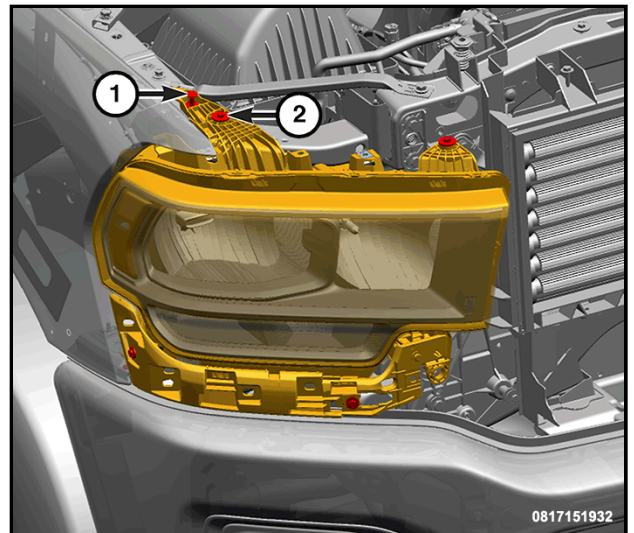

4. Remove front wheel house splash shield (Refer to 23 - Body/Exterior/SHIELD, Splash/Removal and Installation) .
5. From behind the front wheel house splash shield remove the fasteners (1,2).

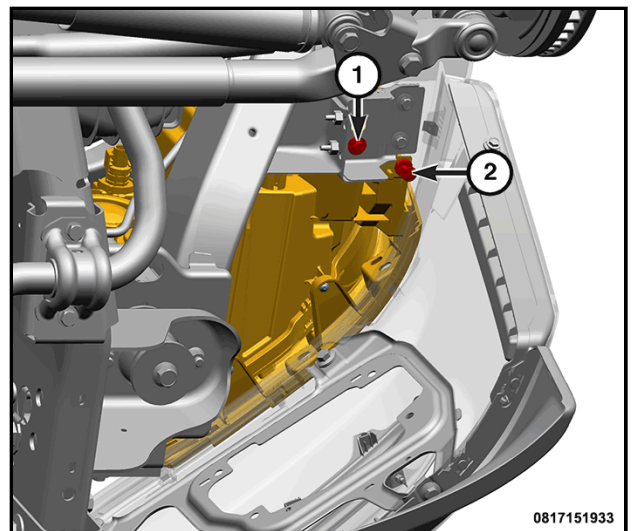

6. Remove the headlamp unit (2) and disconnect the wire harness connectors (1).

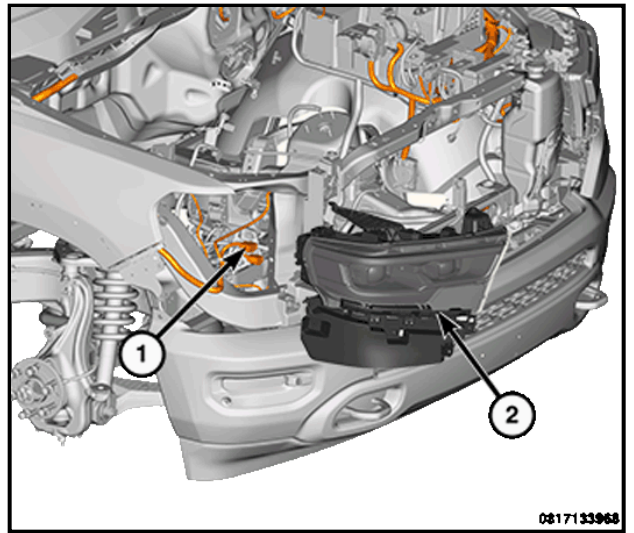

INSTALLATION

1. Connect the wire harness connectors and install the headlamp unit.
2. Install the fasteners.
3. Install the front wheel house splash shield (Refer to 23 - Body/Exterior/SHIELD, Splash/Removal and Installation)
4. Install the grille (Refer to 23 - Body/Exterior/GRILLE/Removal and Installation) .
5. Connect the negative battery cable(s) (Refer to 08 - Electrical/Battery System/Standard Procedure) .