



REAR ENGINE MOUNT

REMOVAL


CAUTION: If replacing a engine mount / bracket, be certain to inspect all other engine mounts / brackets in the system. Failure to follow this caution may result in damage to the vehicle.

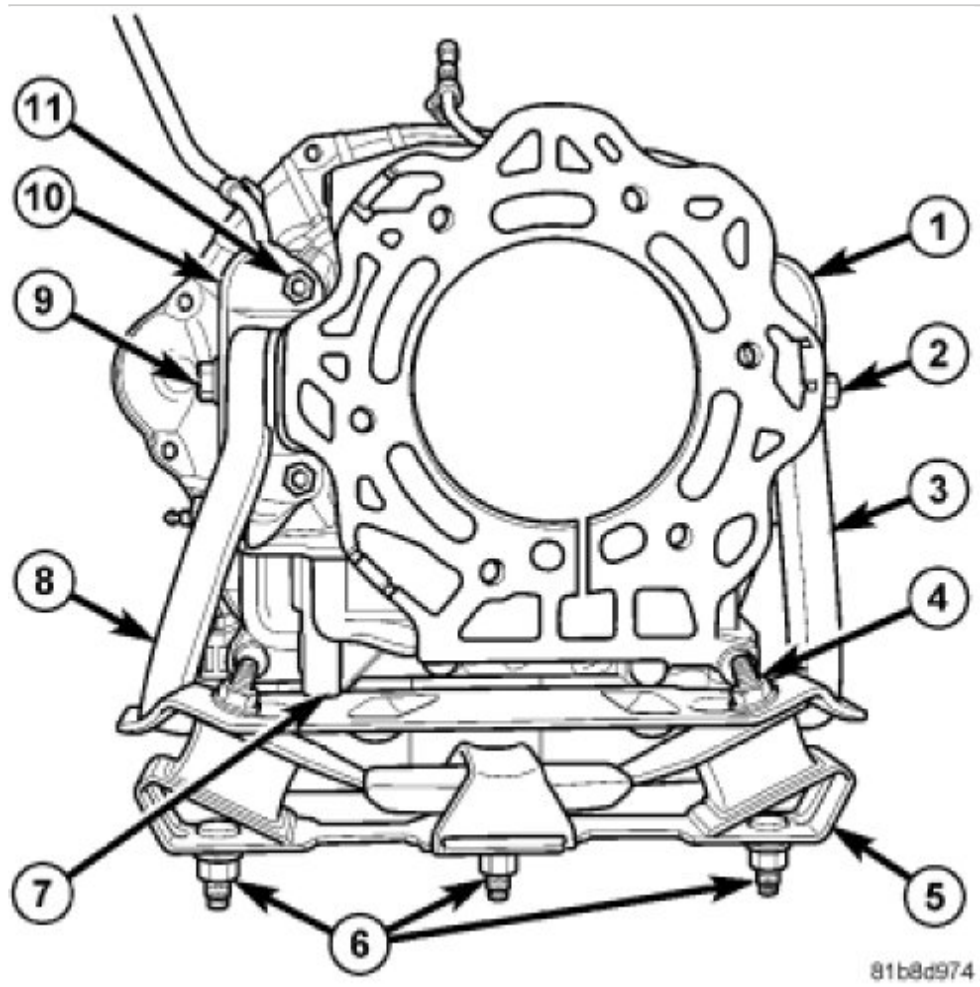


1. Raise the vehicle on a hoist.
2. Position a transmission jack in place.
3. Remove support cushion stud nuts (6).

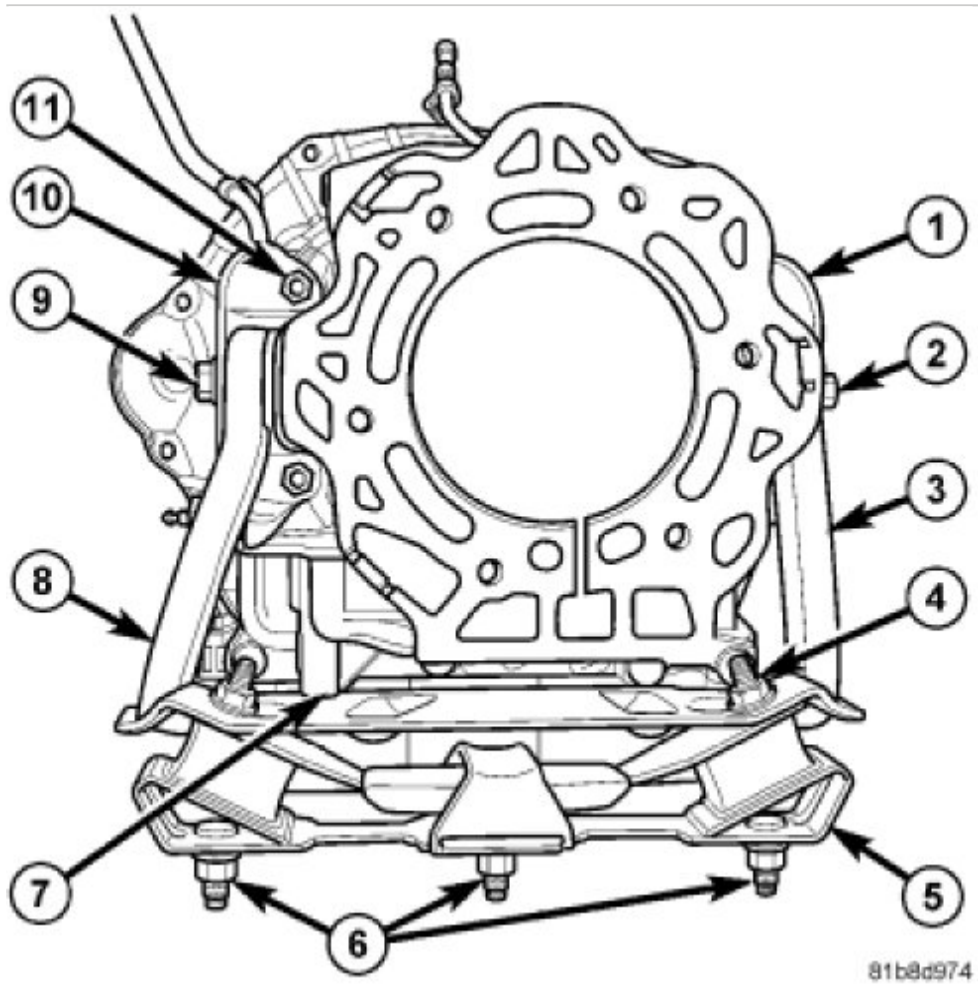


4. Raise rear of transmission until cushion studs (6) clear frame.
5. Remove the nuts holding the support cushion (5) to the transmission support bracket (8).
6. Remove support cushion (5).

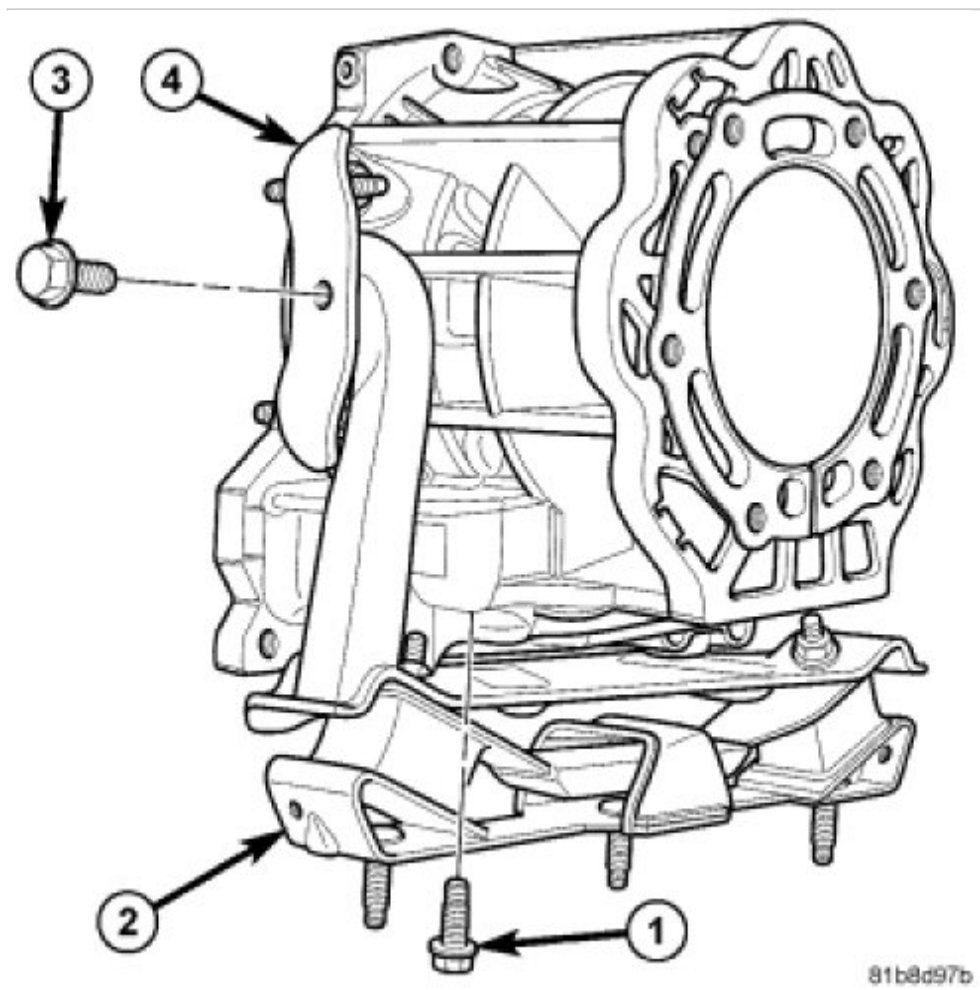

7. Remove the bolts (3) holding the transmission support to the bracket (4).

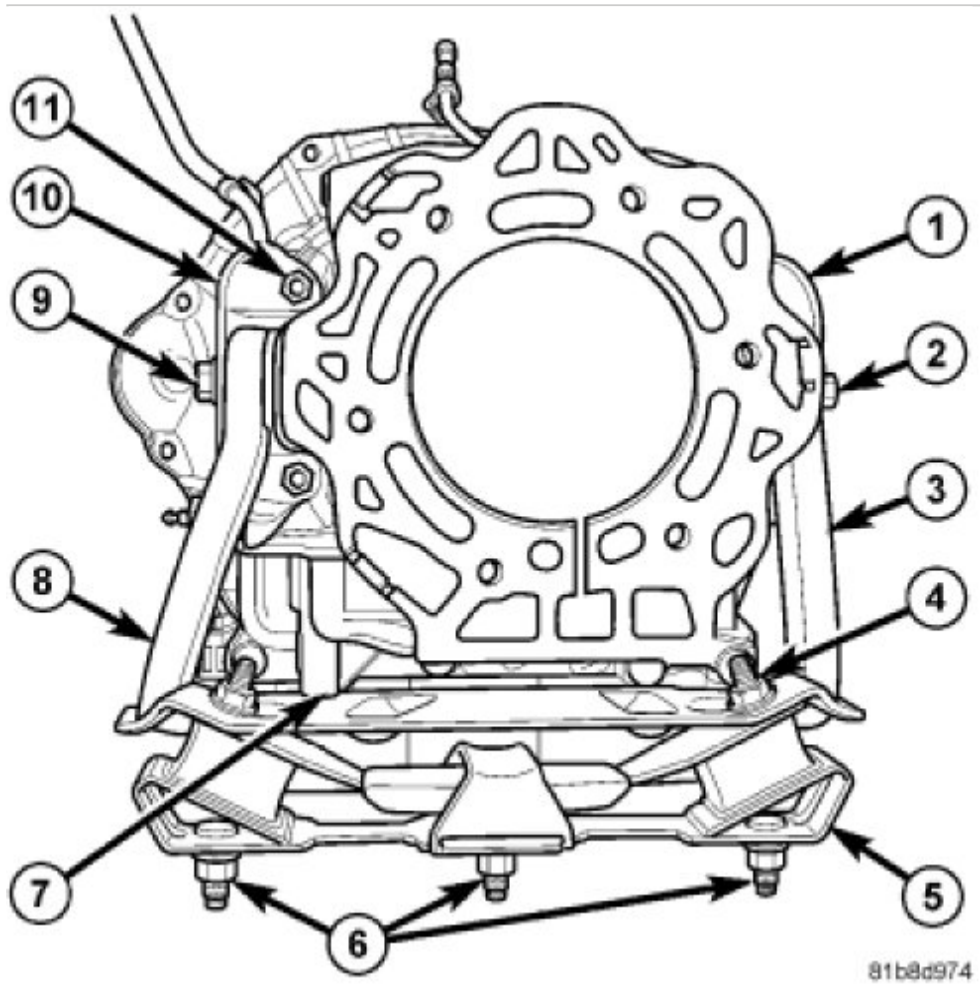

8. Remove the bolts (7) holding the transmission support to the transmission.
9. Remove the transmission support (8).

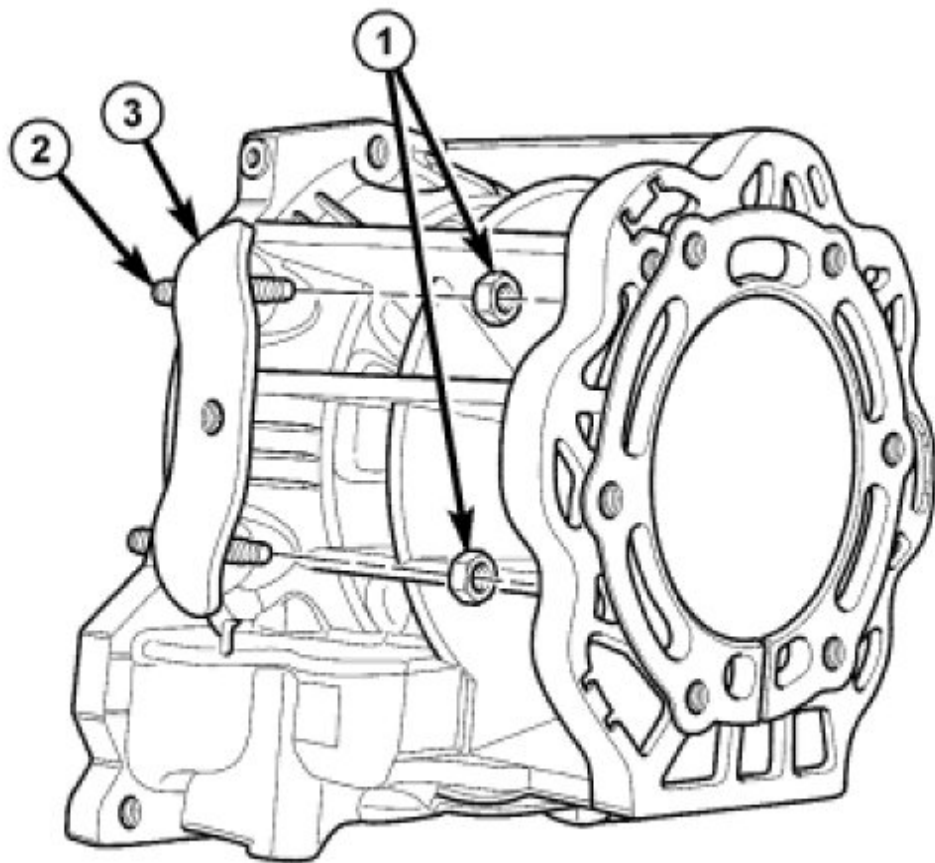

81b8d586

10. Remove the nuts (1) from the transmission bracket.
11. Remove the bracket (3) from the transmission.