


2007 Dodge or Ram Truck RAM 2500 Truck 4WD L6-5.9L DSL Turbo VIN C


Vehicle > Transmission and Drivetrain > Differential Assembly > Seals and Gaskets > Service and Repair > Removal and Replacement > Rear Axle - 11 1/2 AA > Seal-Pinion

REMOVAL


REMOVAL

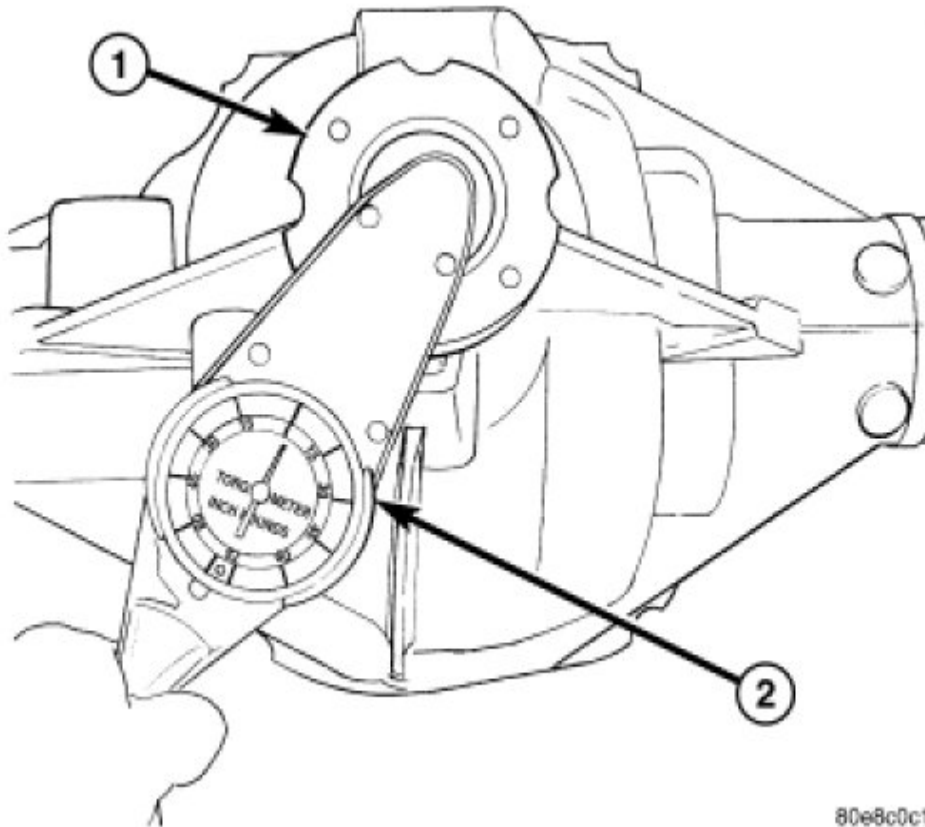

1. Remove axle shafts.
2. Mark the propeller shaft and pinion flange for installation reference.
3. Remove propeller shaft.
4. Rotate pinion gear (1) three or four times.
5. Measure and record the amount of torque necessary to rotate the pinion gear with an inch pound torque wrench (2).

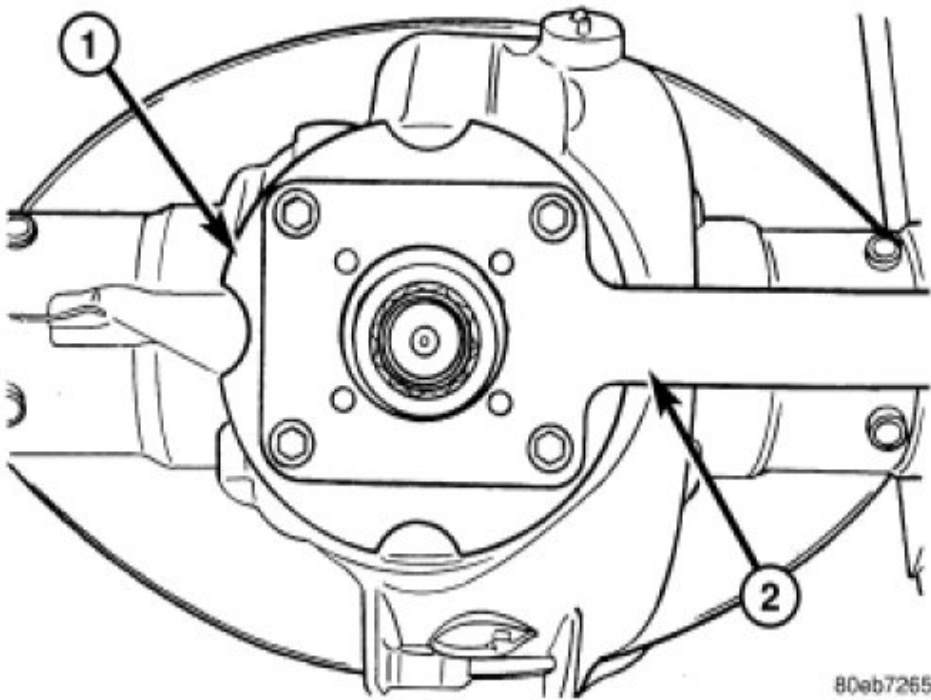

6. Hold pinion flange (1) with Flange Wrench 8979 (2) and remove pinion flange nut.

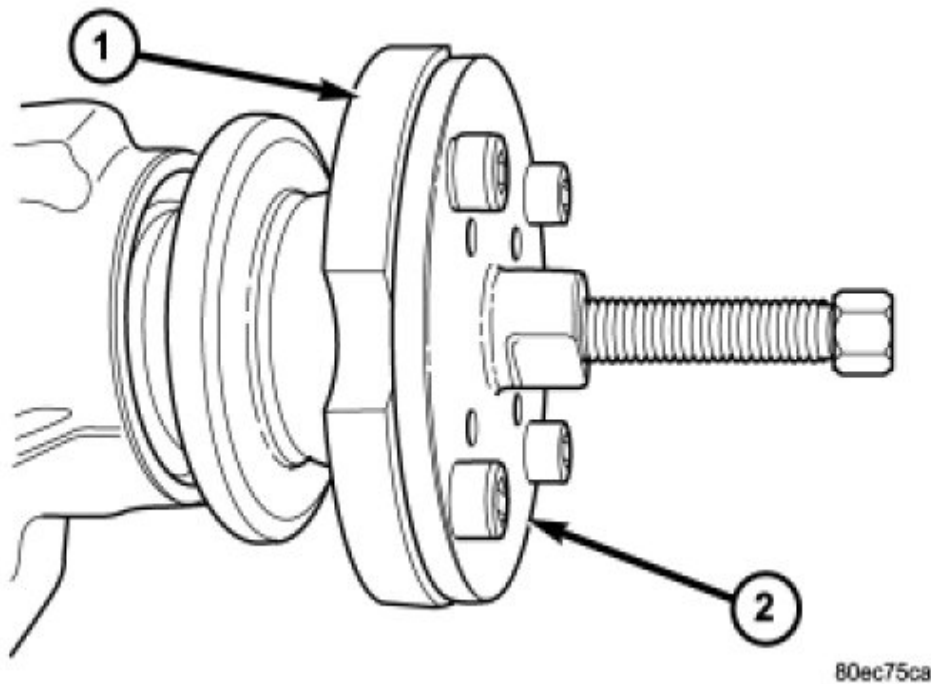

7. Remove pinion flange (1) with Pinion Flange Puller 8992 (2).

8. Remove pinion shaft seal with a seal puller or slide hammer mounted screw.