

## Replacing the Governor Solenoid and Gov Sol Pressure Sensor on the 48RE

NUCICITAIS: 11



pressures aren't close to these, the sensor and solenoid need to be replaced.

- 1 2 Shift: ~28 psi
  - 2 3 Shift: ~50 psi
  - 3 4 Shift: ~95 128 psi (based on throttle position)

4 - To replace the Governor Solenoid and Governor Solenoid Pressure Sensor, follow the steps below.

Drain the tranny and remove the pan.....



Remove the filter. These are two T15 or T20 Torx head screws.....



Now we can see the two items that need to be replaced.....



Remove the bolts that secure the bracket that holds the sensor and solenoid.....



Remove the bracket. Just wiggle it out.....



Remove the two connectors that go to the sensor and solenoid.....



Pop the senor and solenoid out. They simply pull out at this point.....



To put it back together, just reverse the process.



Right Parts, Right Service, Right Prices, No BS....simple as that!



Powered by SMF 2.0 RC3 | SMF © 2006–2010, Simple Machines LLC Simple Audio Video Embedder Theme by Mafia7-Blu-Tech