



## SP-3A "NO VEHICLE SPEED SIGNAL" FAULT TEST

Test SP-3A, repairing fault ``No Vehicle Speed Signal'' (Part 1 of 3)

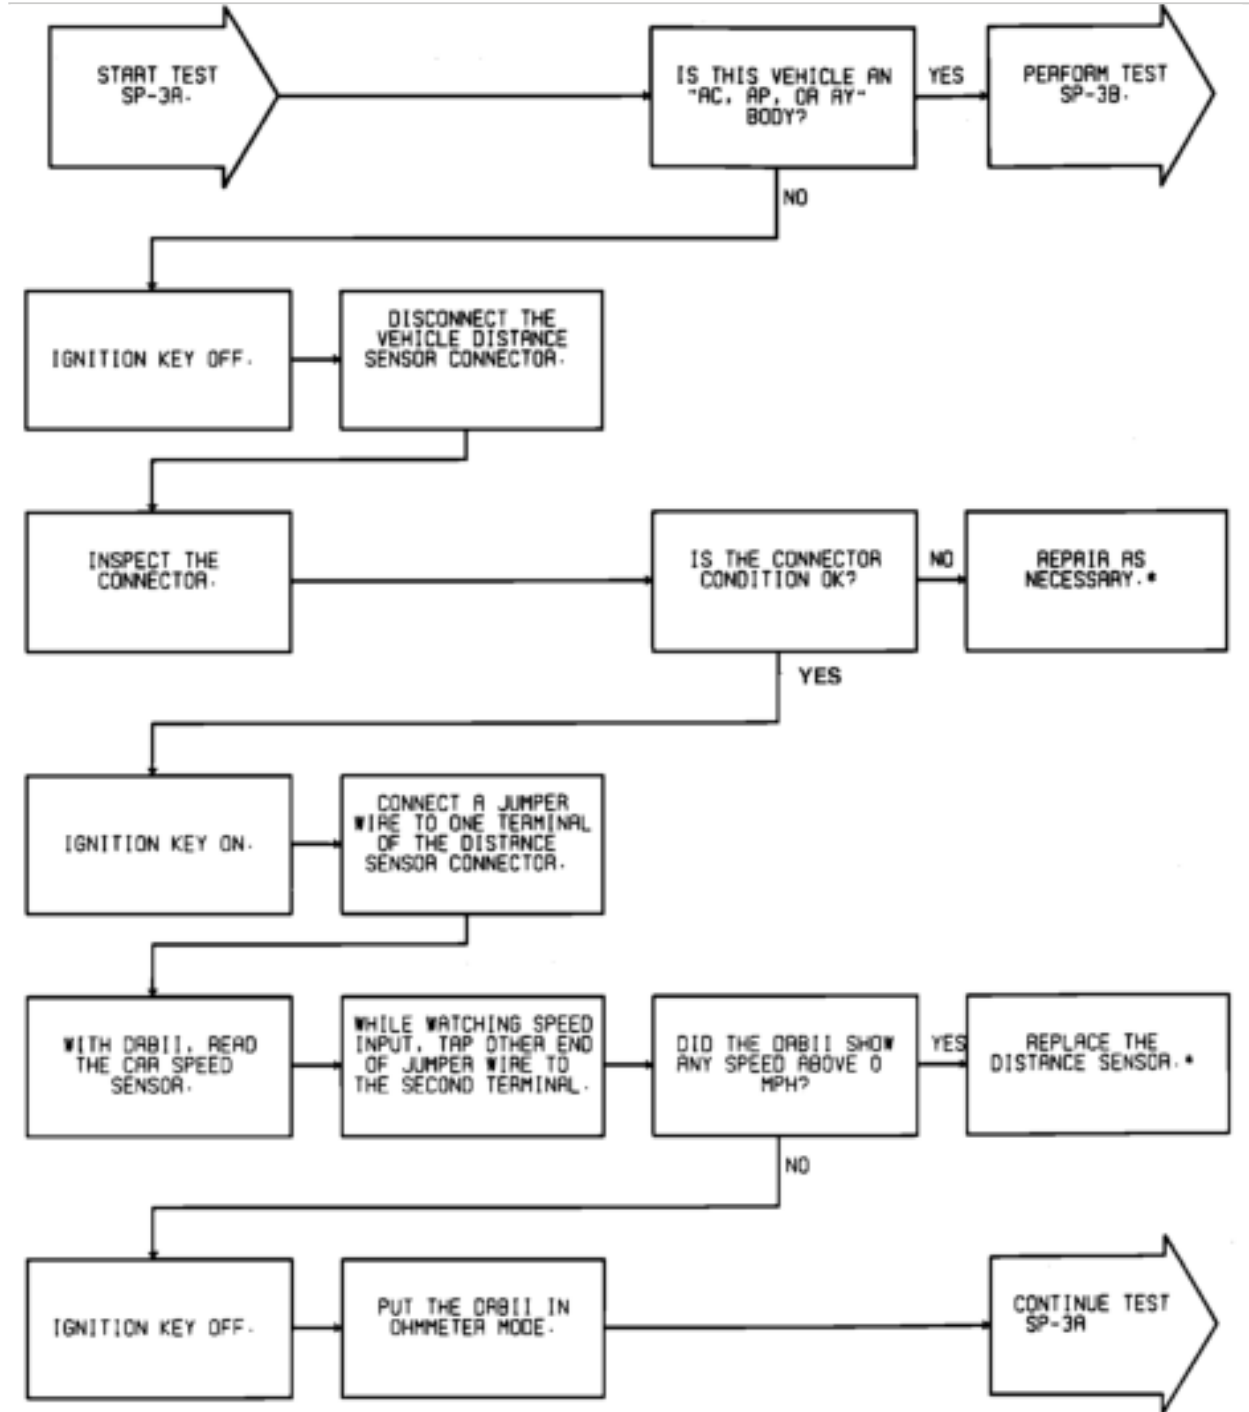

Test SP-3A, repairing fault ``No Vehicle Speed Signal'' (Part 2 of 3)

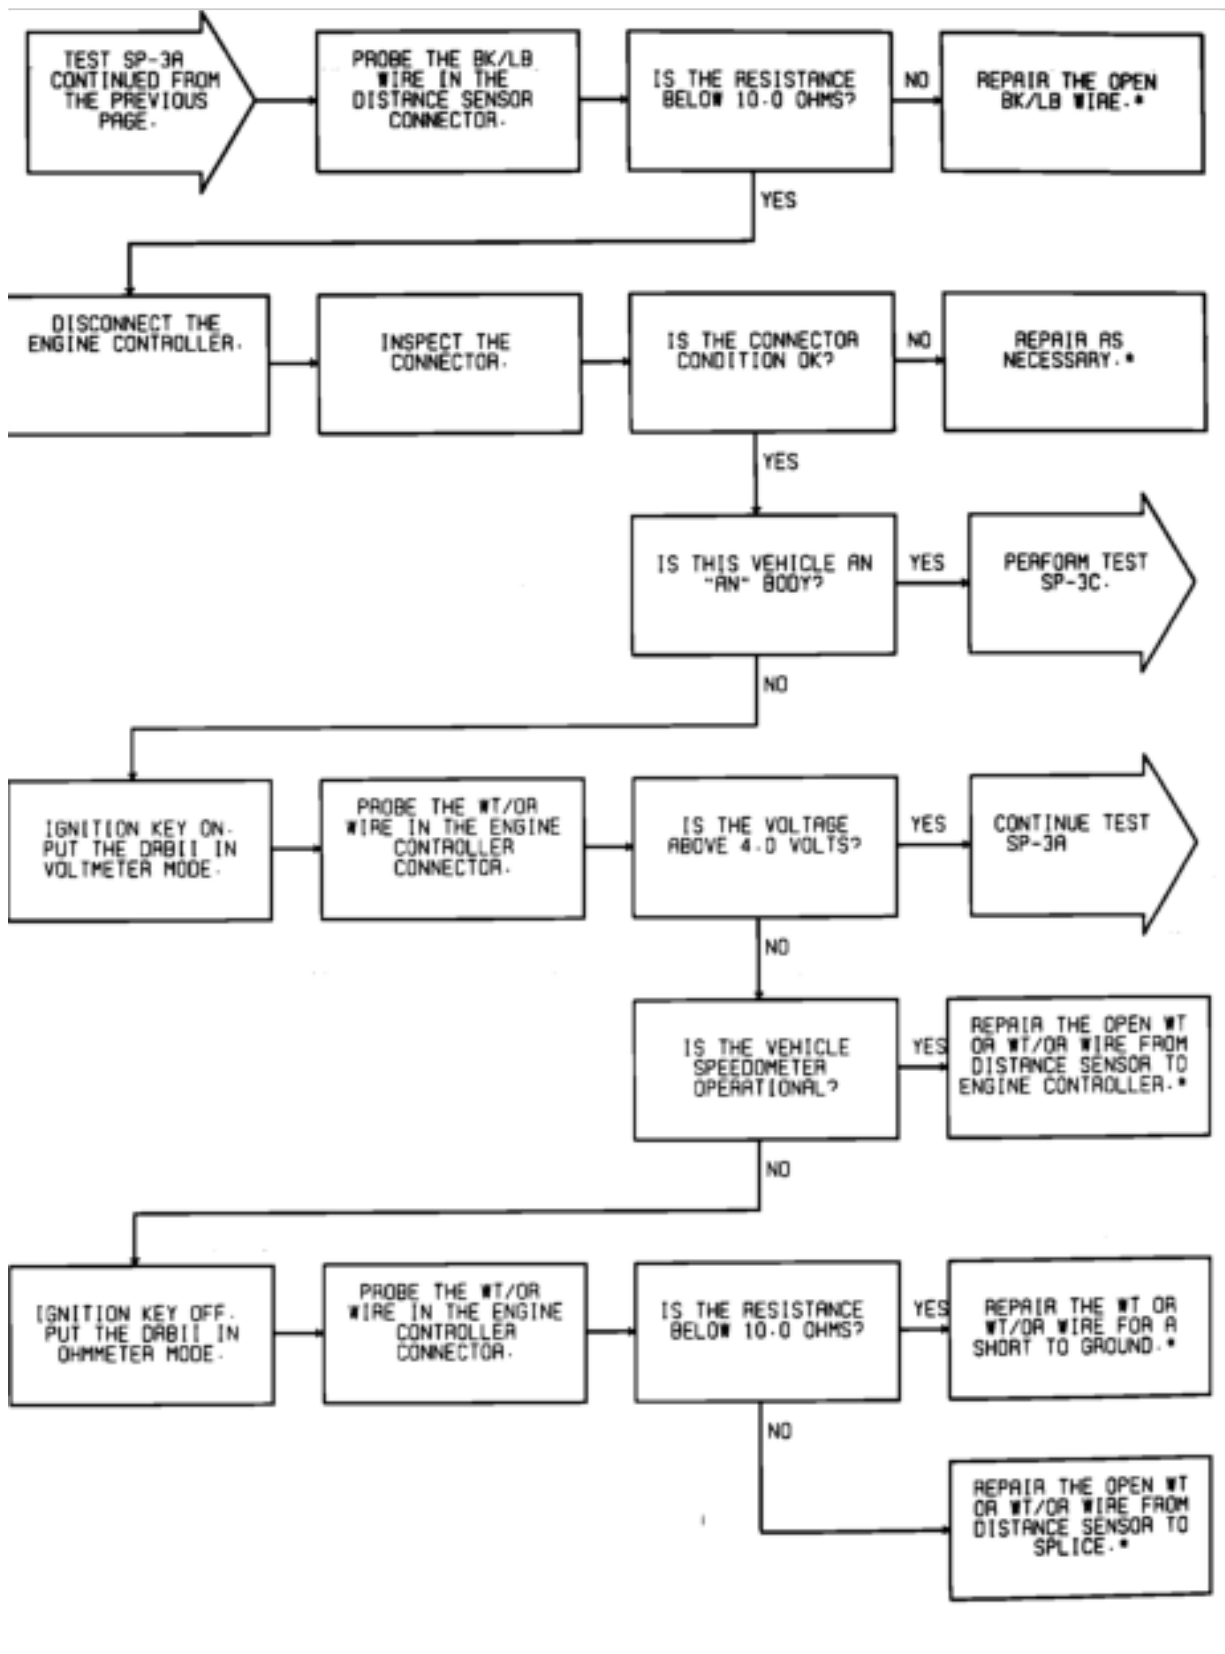

Test SP-3A, repairing fault "No Vehicle Speed Signal" (Part 3 of 3)

