

BATTERY A0

RELAY-RUN/START

FUSE 77 10A

FUSE 21 30A

FUSE 94 10A

ASSEMBLY-POWER DISTRIBUTION CENTER

SWITCH-TRANSFER CASE

FUSED B(+)

GROUND

LIN BUS 1

F946 20 PK/LG

A194 14 RD

A195 20 RD/YL

A195 20 RD/YL

Z911 20 BK

D401 22 OR

SF946E

SF946C

INLINE-DASH/ENGINE/TRANSMISSION

INLINE-BODY/IP

SD401

G911A

C1

C2

FUSED IGNITION

FUSED B(+)

DRIVETRAIN 5 VOLT SUPPLY

TRANSFER CASE ENCODER SIG 0

TRANSFER CASE ENCODER SIG 1

SHIFT MOTOR CONTROL A

SHIFT MOTOR CONTROL B

SWITCHED BATTERY SOLENOID SUPPLY

SWITCHED BATTERY SOLENOID SUPPLY

TRANSFER CASE ENCODER SIG 3

TRANSFER CASE ENCODER SIG 2

K504 18 BR

T307 18 YL/DB

T308 18 YL/LB

T315 14 YL/BR

T316 14 YL/GY

T301 20 DG/YL

T301 20 DG/YL

T310 18 YL/DG

T309 18 YL/TN

ST301A

INLINE-DASH/ENGINE/TRANSMISSION

ASSEMBLY-MOTOR/MODE SENSOR

TRANSFER CASE - AUTOMATIC - DIESEL

