




8W-50 FRONT LIGHTING


Component	Page
Center Identification Lamp	8W-50-7
Daytime Running Lamp Module	8W-50-5, 6
Fog Lamp Relay No. 1	8W-50-6
Fog Lamp Relay No. 2	8W-50-5, 6
Fog Lamp Switch	8W-50-5
Fuse 1 (JB)	8W-50-2, 7
Fuse 5 (JB)	8W-50-2, 6
Fuse 5 (PDC)	8W-50-2
Fuse 7 (JB)	8W-50-6
Fuse D (PDC)	8W-50-6
Fuse F (PDC)	8W-50-6
Fuse G (PDC)	8W-50-5
G100	8W-50-3, 4, 5
G102	8W-50-6, 6
G201	8W-50-5
G302	8W-50-7
Headlamp Dimmer Switch	8W-50-2, 5, 6
Headlamp Switch	8W-50-2, 7
Instrument Cluster	8W-50-6
Joint Connector No. 1	8W-50-4, 5, 6


Component	Page
Joint Connector No. 3	8W-50-3, 4
Joint Connector No. 4	8W-50-4, 5
Joint Connector No. 5	8W-50-2, 5
Joint Connector No. 6	8W-50-6
Junction Block	8W-50-2, 4, 6, 7
Left Fog Lamp	8W-50-5
Left Headlamp	8W-50-3
Left Outboard Clearance Lamp	8W-50-7
Left Outboard Identification Lamp	8W-50-7
Left Park/Turn Signal Lamp	8W-50-4
Overhead Console	8W-50-4, 7
Park Brake Switch	8W-50-6
Power Distribution Center	8W-50-2, 6, 6
Right Fog Lamp	8W-50-5
Right Headlamp	8W-50-3
Right Outboard Clearance Lamp	8W-50-7
Right Outboard Identification Lamp	8W-50-7
Right Park/Turn Signal Lamp	8W-50-4
Security Relay	8W-50-3, 6
Trailer Tow Relay	8W-50-4

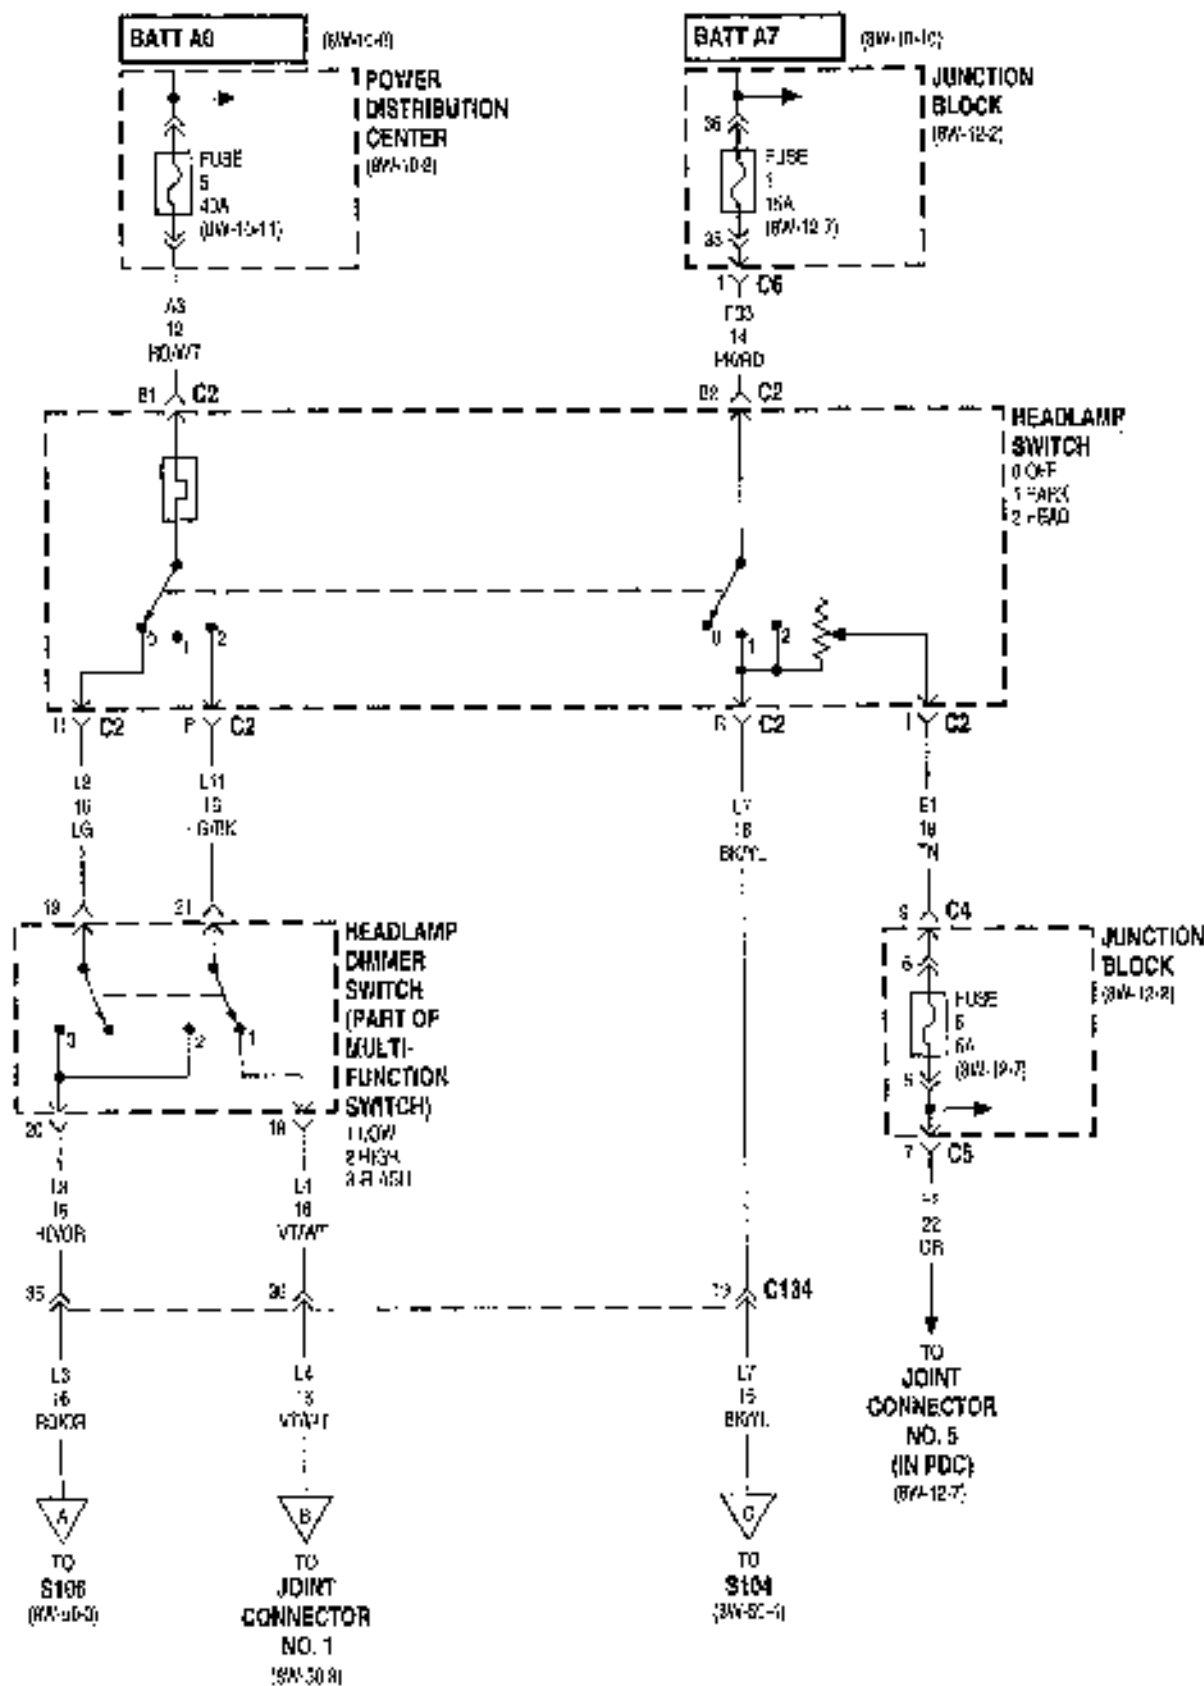


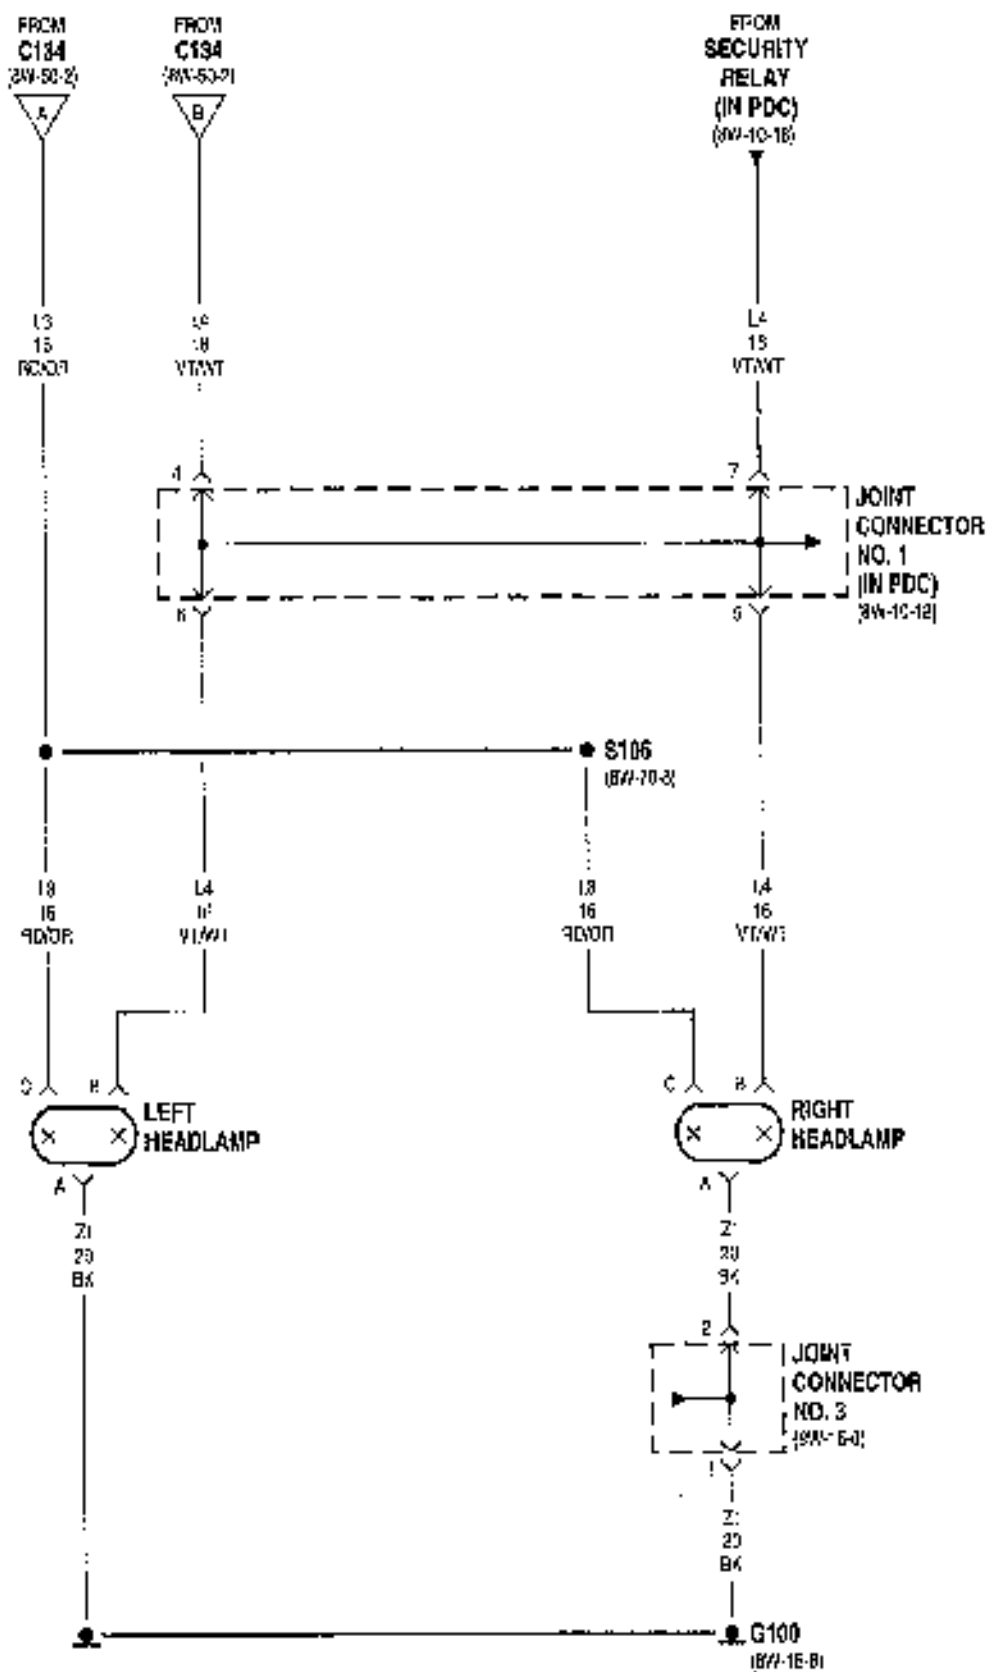

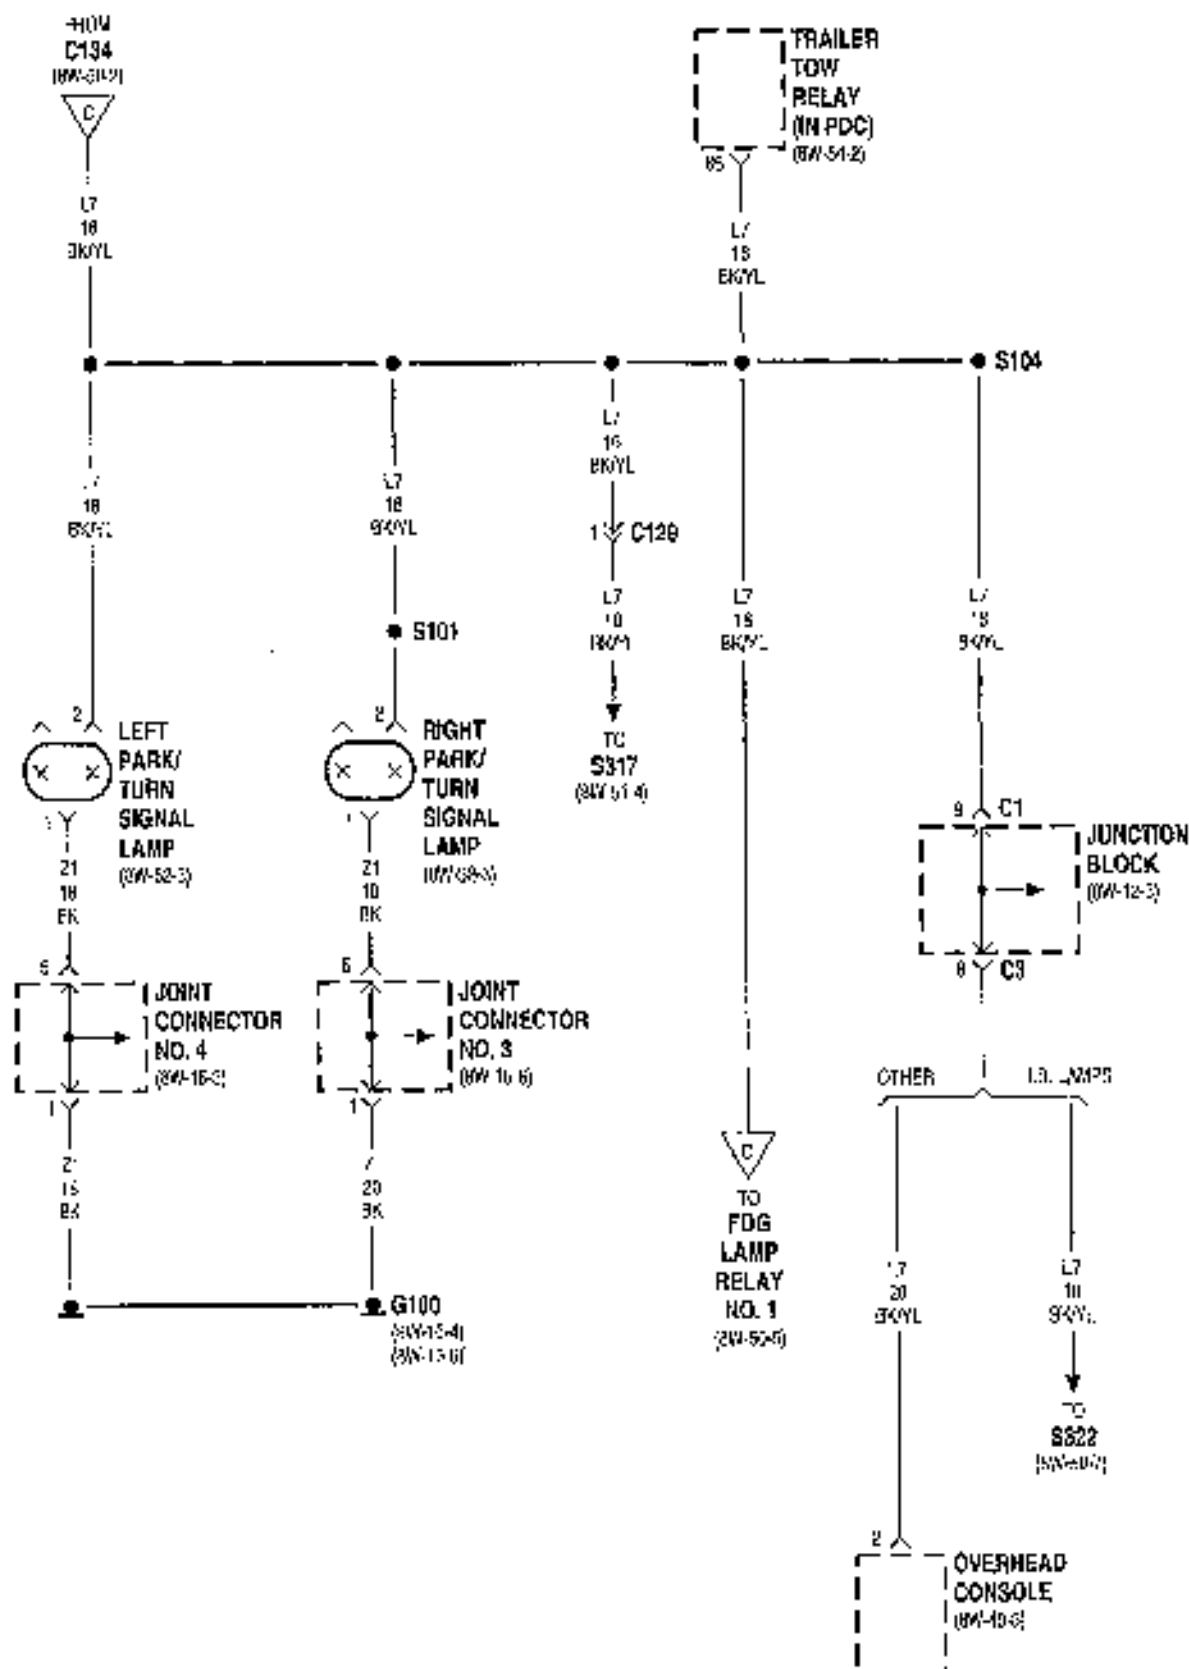

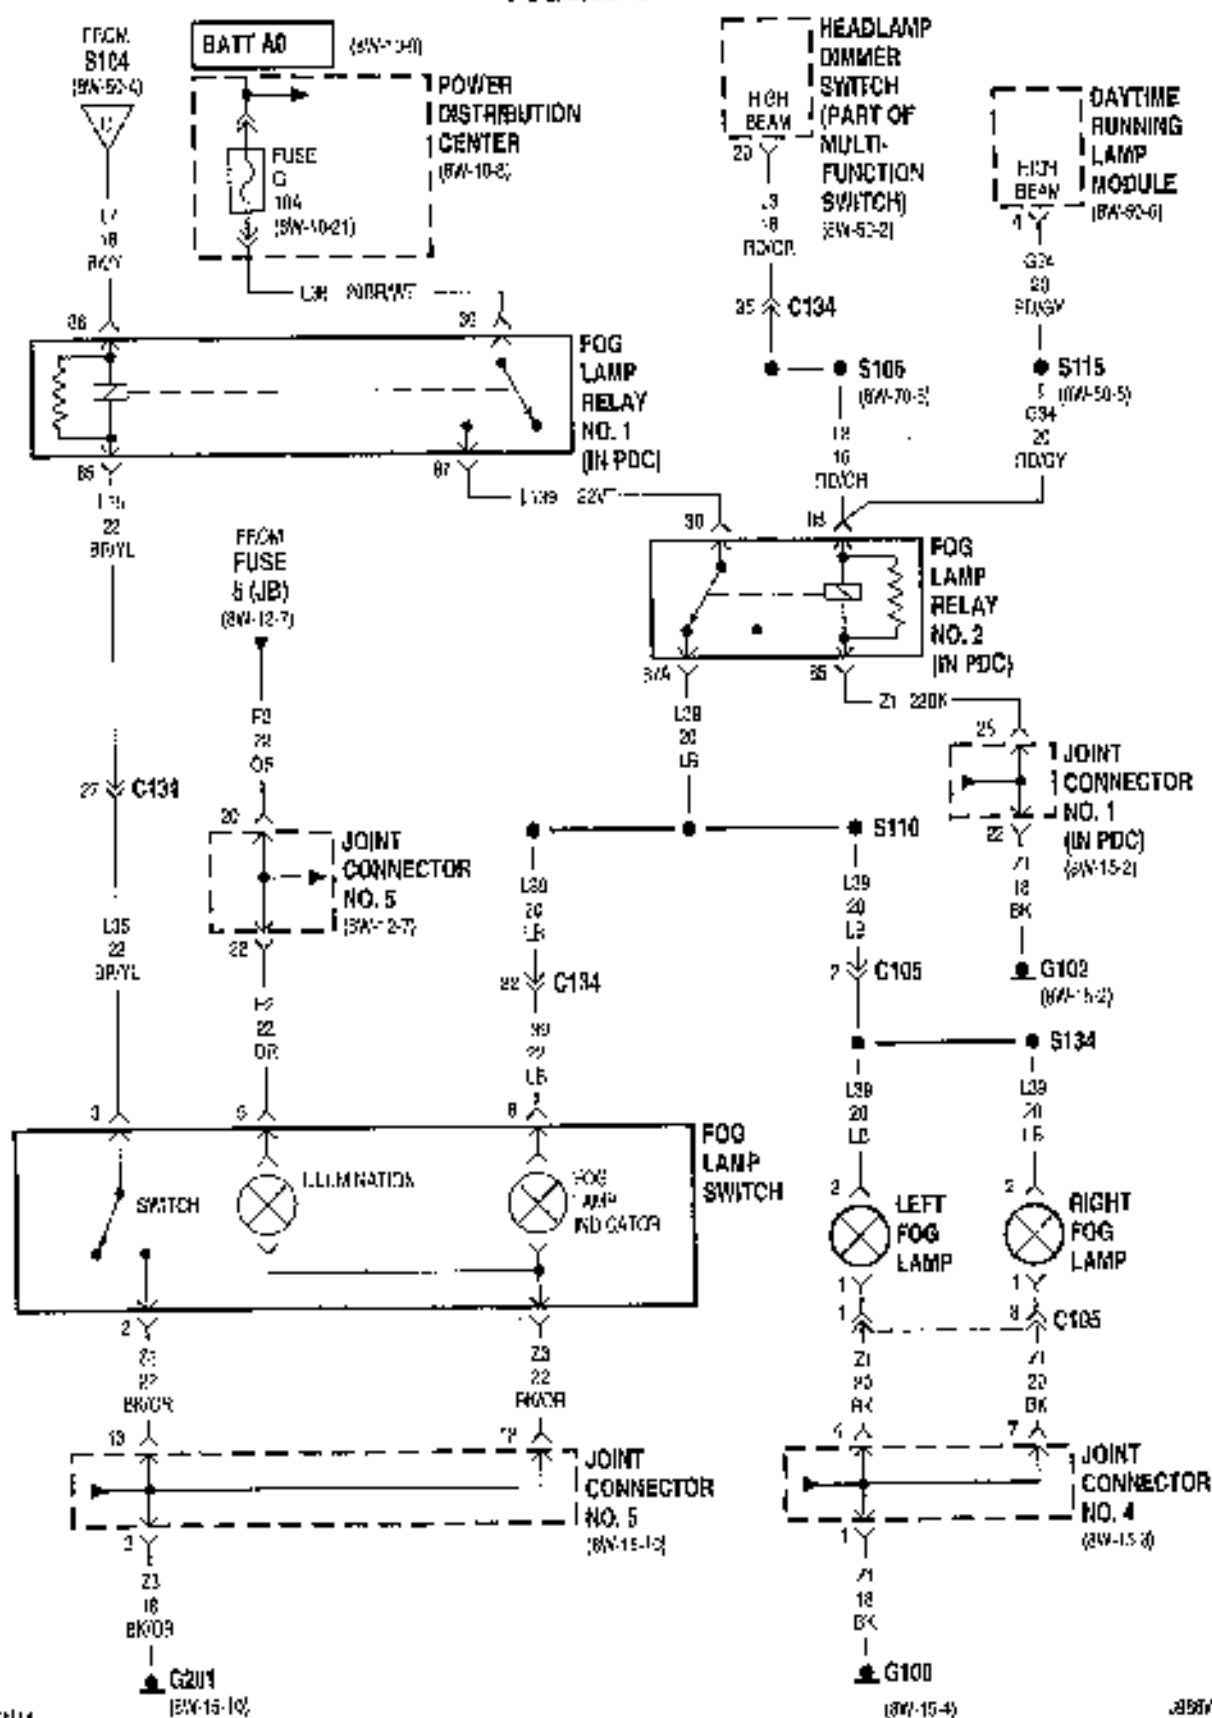

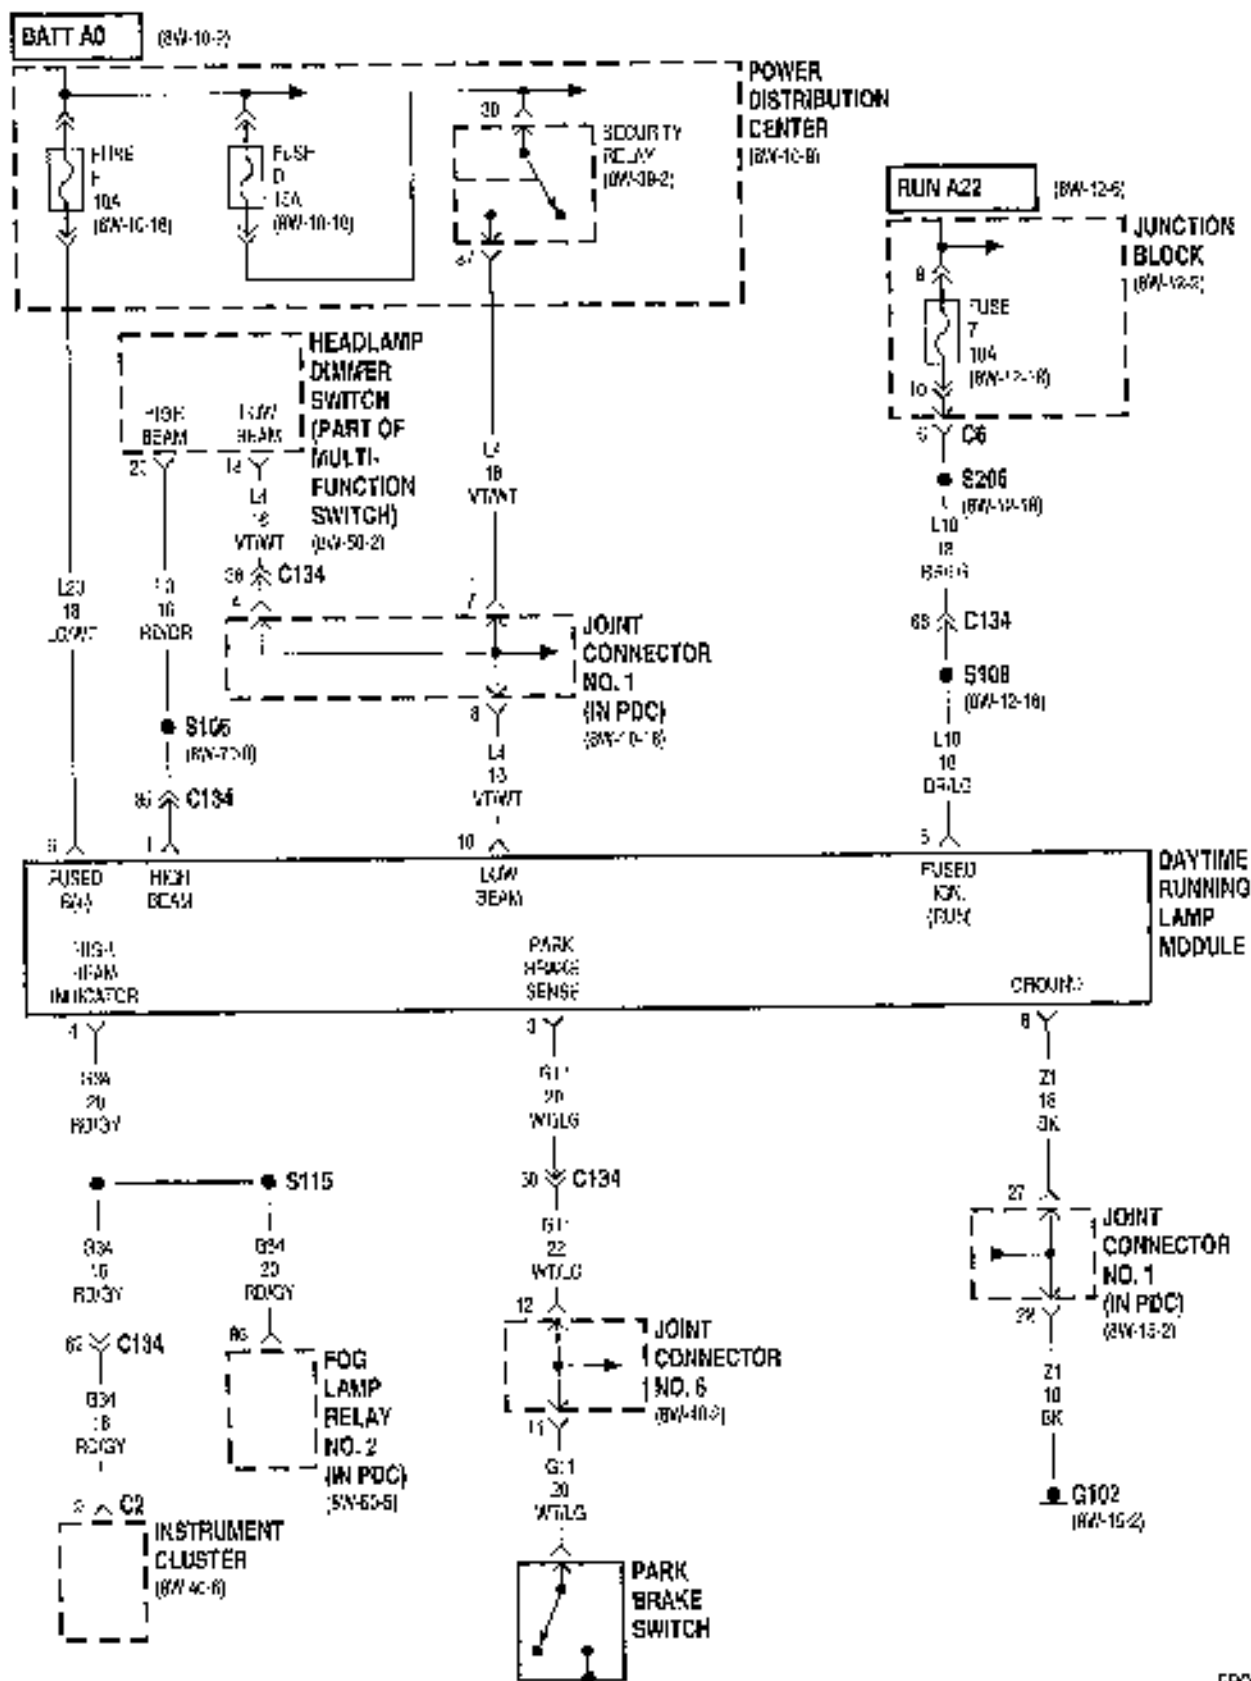

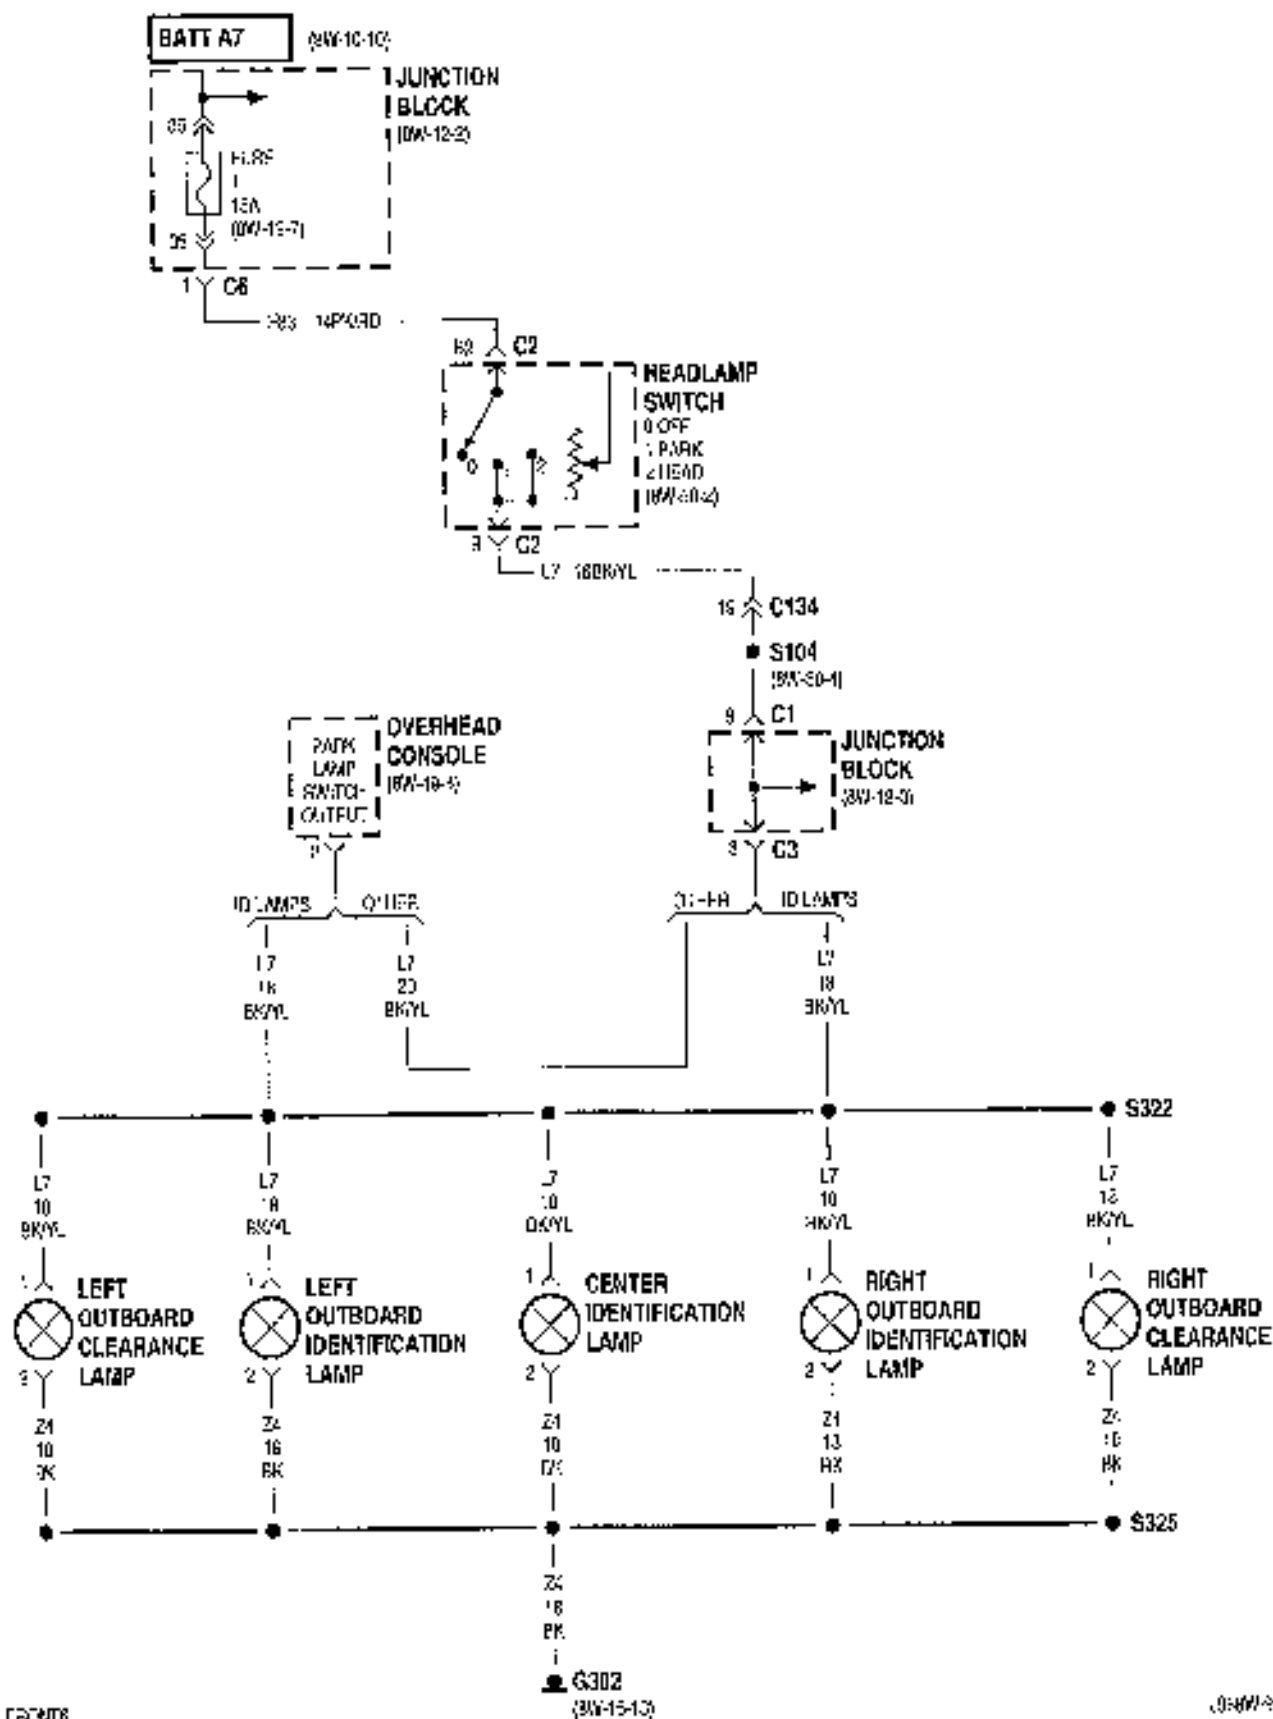

8W-52 TURN SIGNALS

Component	Page
Combination Flasher	8W-52-2
Fuse 10 (JB)	8W-52-2
Fuse B (PDC)	8W-52-2
G100	8W-52-3, 4
G201	8W-52-2
Joint Connector No. 3	8W-52-3
Joint Connector No. 4	8W-52-3

Component	Page
Junction Block	8W-52-2, 3
Left Park/Turn Signal Lamp	8W-52-3
Left Tail/Stop/Turn Signal Lamp	8W-52-4
Power Distribution Center	8W-52-2
Right Park/Turn Signal Lamp	8W-52-3
Right Tail/Stop/Turn Signal Lamp	8W-52-4
Turn Signal/Hazard Switch	8W-52-2

