


MODULE-HANDS FREE - DK GRAY 22 WAY

CAV	CIRCUIT	FUNCTION
1	A114 18GY/RD	FUSED B(+)
2	-	-
3	-	-
4	D54 20WT	CAN B BUS (-)
5	X722 20LB/DG	MICROPHONE 2 IN (+)
6	-	-
7	-	-
8	X716 20GY/TN	LEFT AUDIO OUTPUT
9	X776 20TN/GY	RIGHT AUDIO OUTPUT
10	X795 20DG	COMMON AUDIO OUTPUT
11	-	-
12	-	-
13	-	-
14	D55 20WT/OR	CAN B BUS (+)
15	X730 20GY/YL	VOICE RECOGNITION/PHONE SWITCH SIGNAL
16	X712 20DG/LB	MICROPHONE 1 IN (+)
17	X792 20LB/DG	MICROPHONE IN (-)
18	-	-
19	-	-
20	X793 18DG/YL	MICROPHONE FEED
21	X835 18OR/GY	SENSOR GROUND
22	Z970 18BK	GROUND

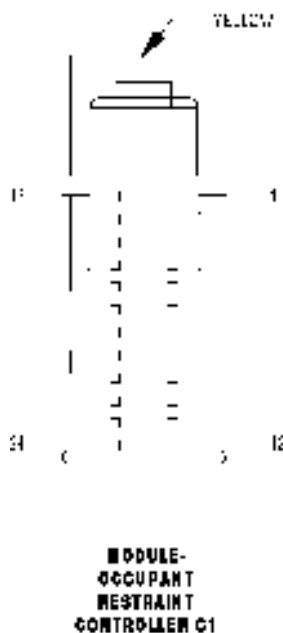

MODULE-OCCUPANT RESTRAINT CONTROLLER C1 - YELLOW 24 WAY

CAV	CIRCUIT	FUNCTION
1	-	-
2	-	-
3	D55 20WT/OR	CAN B BUS (+)
4	D54 20WT	CAN B BUS (-)
5	-	-
6	G104 20VT/GY	PASSENGER AIRBAG INDICATOR DRIVER
7	R104 20LB/LG	PASSENGER AIRBAG MUX SWITCH RETURN
8	R106 20LG/LB	PASSENGER AIRBAG MUX SWITCH SENSE
9	R81 20LB/WT	LEFT FRONT IMPACT SENSOR GROUND
10	R79 20LB/VT	LEFT FRONT IMPACT SENSOR SIGNAL
11	R82 20WT/LB	RIGHT FRONT IMPACT SENSOR GROUND
12	R80 20VT/LB	RIGHT FRONT IMPACT SENSOR SIGNAL
13	-	-
14	-	-
15	-	-
16	-	-
17	R43 20LG/BR	DRIVER SQUIB 1 LINE 1
18	R45 20LG/OR	DRIVER SQUIB 1 LINE 2
19	R44 20LB/OR	PASSENGER SQUIB 1 LINE 2
20	R42 20LB/BR	PASSENGER SQUIB 1 LINE 1
21	R61 20LG/VT	DRIVER SQUIB 2 LINE 1
22	R63 20LG/WT	DRIVER SQUIB 2 LINE 2
23	R64 20LB/WT	PASSENGER SQUIB 2 LINE 1
24	R62 20LB/VT	PASSENGER SQUIB 2 LINE 2