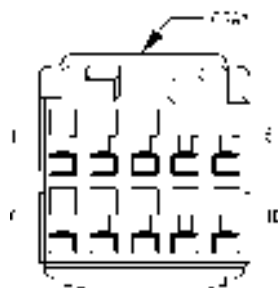



RADIO C1
RADIO C1 - BLACK 22 WAY

CAV	CIRCUIT	FUNCTION
1	A114 18GY/RD	FUSED B(+)
2	-	-
3	-	-
4	X716 20GY/TN (HANDS FREE)	LEFT AUDIO OUTPUT
5	D55 20WT/OR	CAN B BUS (+)
6	D54 20WT	CAN B BUS (-)
7	X154 18GY/YL (BASE)	RIGHT FRONT DOOR SPEAKER (+)
8	X156 18GY/LB (BASE)	RIGHT FRONT DOOR SPEAKER (-)
9	X155 18DG/LB (BASE)	LEFT FRONT DOOR SPEAKER (-)
10	X153 18DG/YL (BASE)	LEFT FRONT DOOR SPEAKER (+)
11	Z514 18BK/LG	GROUND
12	A114 18GY/RD	FUSED B(+)
13	-	-
14	-	-
15	-	-
16	X776 20TN/GY	RIGHT AUDIO OUTPUT
17	X795 20DG	COMMON AUDIO OUTPUT
18	X205 18GY/LG (BASE)	LEFT REAR SPEAKER (+)
18	X51 20DG/DB (PREMIUM)	LEFT REAR SPEAKER (+)
19	X295 18GY/DG (BASE)	LEFT REAR SPEAKER (-)
19	X57 20DG/OR (PREMIUM)	LEFT REAR SPEAKER (-)
20	X296 18DG/GY (BASE)	RIGHT REAR SPEAKER (-)
20	X58 20GY/OR (PREMIUM)	RIGHT REAR SPEAKER (-)
21	X206 18DG/LG (BASE)	RIGHT REAR SPEAKER (+)
21	X52 20GY/DB (PREMIUM)	RIGHT REAR SPEAKER (+)
22	Z515 18BK	GROUND


RADIO C2
RADIO C2 - GRAY 10 WAY

CAV	CIRCUIT	FUNCTION
1	X16 20DG/YL	AUDIO SIGNAL RIGHT (+)
2	X917 20DG	AUDIO SIGNAL COMMON
3	-	-
4	X510 18DG/LB	VDO-AUX AUDIO RIGHT
5	X916 20GY/OR	SDARS AUDIO RETURN
6	X17 20DG/OR	AUDIO SIGNAL LEFT (+)
7	X910 18GY/DG	AUX AUDIO RETURN
8	X511 18GY/LG	VDO-AUX AUDIO LEFT
9	X521 18GY/LB	VDO-AUX AUDIO LEFT 2
10	X522 18GY/DB	VDO-AUX AUDIO RIGHT 2