


AMPLIFIER
AUDIO C1

AMPLIFIER AUDIO C1 - GRAY 12 WAY


CAV	CIRCUIT	FUNCTION
1	X53 200G	LEFT FRONT SPEAKER (+)
2	X55 208R/RO	LEFT FRONT SPEAKER (-)
3	X57 208R/LB	LEFT REAR SPEAKER (-)
4	Z115 180B/BK	GROUND
5	X60 200G/RO	RADIO 12 VOLT OUTPUT
6	X56 200B/RO	RIGHT FRONT SPEAKER (-)
7	X54 20VT	RIGHT FRONT SPEAKER (+)
8	X51 208R/YL	LEFT REAR SPEAKER (+)
9	X58 200B/OR	RIGHT REAR SPEAKER (-)
10	X52 200B/WT	RIGHT REAR SPEAKER (+)
11	Z125 188K/OB	GROUND
12	O25 20VT/GY	PCI BUS

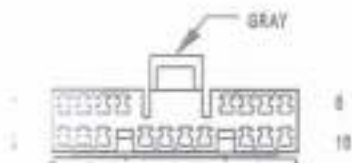

AMPLIFIER
AUDIO C2

AMPLIFIER AUDIO C2 - GRAY 18 WAY

CAV	CIRCUIT	FUNCTION
1	F75 18VT	FUSED B(+)
2	-	-
3	-	-
4	X91 18WT/BK	LEFT REAR SPEAKER (-)
5	X82 18LB/VY	RIGHT FRONT DOOR SPEAKER (-)
6	X87 18LG/RO	LEFT FRONT DOOR SPEAKER (+)
7	X84 18OR/BK	RIGHT INSTRUMENT PANEL SPEAKER (+)
8	X83 18YL/RO	LEFT INSTRUMENT PANEL SPEAKER (-)
9	F75 18VT	FUSED B(+)
10	-	-
11	-	-
12	X93 18WT/RO	LEFT REAR SPEAKER (+)
13	X82 18TN/BK	RIGHT REAR SPEAKER (-)
14	X54 18TN/VY	RIGHT REAR SPEAKER (+)
15	X80 18LB/BK	RIGHT FRONT DOOR SPEAKER (-)
16	X85 18LG/OG	LEFT FRONT DOOR SPEAKER (-)
17	X88 18OR/RO	RIGHT INSTRUMENT PANEL SPEAKER (-)
18	X81 18YL/BK	LEFT INSTRUMENT PANEL SPEAKER (+)

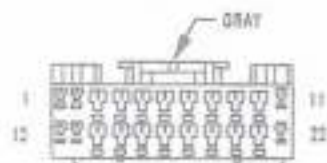

RADIO
(PREMIUM)

RADIO (PREMIUM) - GRAY 22 WAY

CAV	CIRCUIT	FUNCTION
1	M1 18PK	FUSED B(+)
2	Y105 208R/RO	FUSED IGNITION SWITCH OUTPUT (RUN-ACC)
3	Y166 200R/OB	PANEL LAMPS DRIVER
4	-	-
5	-	-
6	-	-
7	X54 20VT	RIGHT FRONT SPEAKER (+)
8	X56 200B/RO	RIGHT FRONT SPEAKER (-)
9	X55 208R/RO	LEFT FRONT SPEAKER (-)
10	X53 200G	LEFT FRONT SPEAKER (+)
11	Z9 188K/OG	GROUND
12	M1 18PK	FUSED B(+)
13	X60 200G/RO	RADIO 12V OUTPUT
14	O25 20VT/LB	PCI BUS
15	-	-
16	-	-
17	-	-
18	X51 208R/YL	LEFT REAR SPEAKER (+)
19	X57 208R/LB	LEFT REAR SPEAKER (-)
20	X58 200B/OR	RIGHT REAR SPEAKER (-)
21	X52 200B/WT	RIGHT REAR SPEAKER (+)
22	Z9 188K/OG	GROUND